

Software Version and Windows Version Compatibility Chart

		WindowsXP	WindowsVista	Windows7	Windows8/8.1	Windows10
Software for Automatic Positioning and Measurement	SGADVANCEE	Ver.1.0.0 or later	Ver.1.0.0 or later	Ver.1.0.0 or later	Ver.2.1.1 or later	Ver.2.1.1 or later
Terminal Software	SGTERME	Ver.1.0.0 or later	Ver.3.0.0 or later (Ver.6.0.0 or later for 64bit)	Ver.3.0.0 or later (Ver.6.0.0 or later for 64bit)	× ※1	× ※1
Software for Positioning & Measurement	SGEMCSE	Ver.1.0.0 or later	Ver.3.0.0 or later (Ver.6.0.0 or later for 64bit)	Ver.3.0.0 or later (Ver.6.0.0 or later for 64bit)	× ※1	× ※1
Software for Positioning, Measurement & Analysis	SGMACSE	Ver.1.0.0 or later	Ver.2.0.0 or later (× for 64bit)	Ver.2.0.0 or later (× for 64bit)	× ※4	× ※4
Automated Collimation Measurement Software	SGCAMSE	Ver.1.0.0 or later	×	×	×	×
Software for Liquid Crystal Evaluation System	SGLCESE	Ver.1.0.0 or later	Ver.2.0.0 or later (Ver.5.0.0 or later for 64bit)	Ver.2.0.0 or later (Ver.5.0.0 or later for 64bit)	× ※2	× ※2
	SGADVANCEE+PLUS	Ver.2.0.0 or later	Ver.2.0.0 or later	Ver.2.0.0 or later	Ver.2.1.1 or later	Ver.2.1.1 or later
Component Software for VB.NET	SGNETXE	Ver.1.0.0 or later	Ver.1.0.1 or later (Ver.2.0.0 or later for 64bit)	Ver.2.0.0 or later	Ver.3.0.0 or later	Ver.3.0.0 or later
Image Measurement Software	SGMMS	Ver.2.5 or later	×	Ver.2.5 or later	×	Ver.2.7 or later
ActiveX for Positioning & Measurement	SGACTXE	Ver.1.0.0 or later	× ※3	× ※3	× ※3	× ※3
ActiveX for Positioning & Measurement	SGPATXE	Ver.1.0.0 or later	× ※3	× ※3	× ※3	× ※3
ActiveX for SFS controller FINE-501/502/503	SGSFSXE	Ver.1.0.0 or later	× ※3	× ※3	× ※3	× ※3

- ※1 SGTERME and SGEMCSE are integrated into SGADVANCEE. SGADVANCEE is compatible with Windows 8 or later.
- ※2 SGADVANCEE+PLUS is SGADVANCEE integrated with SGLCESE. SGADVANCEE+PLUS is compatible with Windows 8 or later.
- ※3 SGACTXE, SGPATXE and SGSFSXE are integrated into SGNETXE. SGNETXE is compatible with Windows Vista or later.
(SGNETXE is for Visual Basic .NET. It is not compatible with Visual Basic 6.0 or earlier and Excel macros.)
- ※4 Please use SGADVANCEE when using binary data equipment in Windows 8 or later.