

# Air Duster Lens Cleaner / Lens Paper

**CD-31ECO**  
**SLC / SLP**

## CD-31ECO

Catalog Code **W3467**

Cleaner to blows dust and dirt from optics with clean compressed gas.



- This is an environment friendly non-flon type air duster.
- The liquid are not come out from the container even if the container is turned upside down.
- Please wipe off terrible dirt with a lens paper impregnated with a lens cleaner first, and it is effective to use this item as finishing or after installing the optics in the holder.
- Ideal for removing the dust from mirror surface which is not suited to wipe such as gold coated mirror.

### Attention

- ▶ Pay close attention to not to bring fire (including sparks due to static electricity etc) close to staying gas or liquefied gas to avoid catching fire.
- ▶ Do not store in locations with temperatures of 40°C or above for extended periods. Do not incinerate after use.
- ▶ This item is prohibited to bring into the airplane and to transport by air.
- ▶ This item may spray liquid at first use. Spray once in another direction to confirm that no liquid is ejected before use on optical surfaces.

### Specifications

Part Number	Capacity (mℓ)	Accessory	Ingredient
<b>CD-31ECO</b>	350	nozzle (approx. 130 mm)	Diethyl ether, carbon dioxide

## SLC

Catalog Code **W3159**



Our special formulated optics cleaner is designed to remove stubborn stains, fingerprints and foreign particles while being gentle to optics.

- Removes stains, fingerprints, and foreign particles without damaging optics such as lenses, mirrors, or prisms.
- Use the lens cleaner with the lens paper (optional).
- SLC2-300 adopts flip top cap and has excellent sealability.

### Attention


- ▶ \*Japanese Domestic Sales Only
- ▶ Do not use lens paper or wiping cloth to clean soft surfaces such as single-layer metallic film (aluminum, gold, etc.), special coatings, crystals (Glan Thompson Prism), and other equipment.

### Specifications

Part Number	Capacity [cc]	Hydrocarbon Solvent [%]	Antistatic agents [%]
<b>SLC2-300</b>	300	95	5

## SLP

Catalog Code **W3160**

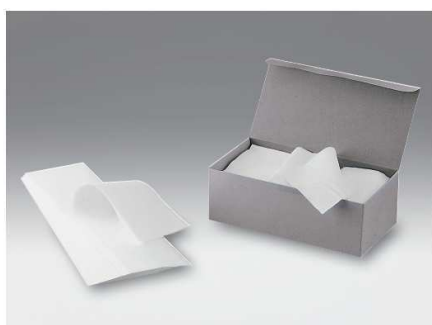

Lens papers for cleaning optics such as lenses, prisms, or mirrors.

- Use the SLP-1 paper for relatively scratch resistant materials such as BK7 and quartz materials and the SLP-2 paper for hard-coated and soft products.
- Each pack contains 100 sheets.

### Specifications

Part Number	Size [mm]
<b>SLP-1</b>	80×300
<b>SLP-2</b>	100×200

Application Systems

Optics & Optical Coatings

Opto-Mechanics

Bases

Manual Stages

Actuators & Adjusters

MotORIZED Stages

Light Sources & Laser Safety

Index

Guide

Mirrors

Beamsplitters

Polarizers

Lenses

Multi-Element Optics

Filters

Prisms

Substrates/Windows

Optical Data

Maintenance

Cleaning Tools

Cabinets